 


GENERAL INSTALLATION GUIDELINES FOR COMBINATION EMERGENCY EXIT LIGHT (FHEM10WHU)

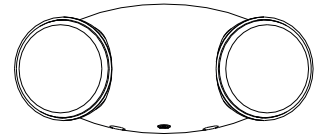

When using electrical equipment, including this emergency exit product, basic safety precautions should be followed at all times, including but not limited to the following:

 
IMPORTANT!

Battery in this unit may not be fully charged. After connecting unit to AC power, allow battery to charge for at least 24 hours, before performing operational test . To perform operational test, press the " TEST " button. The light on the unit should be illuminated. The lamps listed herein,when used according to these instructions are in accordance with the requirements of UL924 standards.

PLEASE READ CAREFULLY AND FOLLOW ALL INSTRUCTIONS FOR YOUR SAFETY

1. Do not use outdoors.
2. Equipment should be mounted in locations at heights where it will not be subject to tampering by unauthorized personnel.
3. Do not mount near gas or electric heaters.
4. The use of accessories not recommended by the manufacturer may cause an unsafe condition.
5. Do not use this equipment for other than its intended use.
6. Servicing of this equipment should be performed by qualified personnel.
7. Disconnect AC power before servicing.

SAVE THESE INSTRUCTIONS



FLEXIBLE CONDUIT ONLY!

- Disconnect AC power before servicing and installation
- For connection to branch circuit wiring, use only conduit and conduit fittings suitable for wet locations.
- Battery in this unit may not be fully charged.

INSTALLATION (J-BOX Mounting)

- 1) Feed fixture leads through back plate and connect AC power supply (Fig A).
- 2) Connect wires through J-Box. Secure back plate on to J-Box with screws.
- 3) Connect battery only after AC power can be provided to the unit (Fig. B).
- 4) Align snaps and push housing directly onto back plate (Fig. C). Supply AC power and press "TEST" button to check light.

INSTALLATION (CONDUIT)

- 1) Secure back plate to wall surface . Route wires through hole in conduit flange and make conduit connection.
- 2) Connect battery only after AC power can be provided to the unit (Fig. B).
- 3) Align snaps and push housing directly onto back plate (Fig. C). Supply AC power and press "TEST"

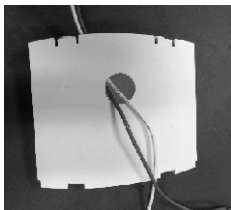 


Fig.A

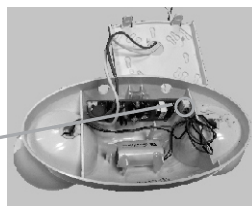 
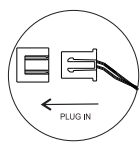 


Fig.B


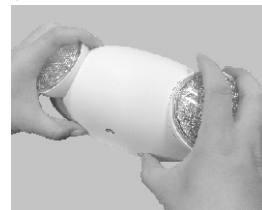 


Fig.C

 

GENERAL INSTALLATION GUIDELINES FOR COMBINATION EMERGENCY EXIT LIGHT (FHEM10WHU)

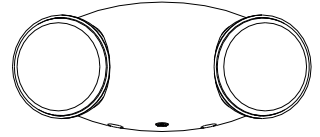

OPERATION

1. During an electrical power failure, the lamps will automatically illuminate for a minimum of 90 minutes.
2. To test, push the "TEST" switch. The emergency lamps will illuminate. When the switch is released, the lamps will go off.
3. LED light is ON when AC power & battery connected.
LED light is OFF when AC power is disconnected.
LED light will be OFF when battery is disconnected or damaged.

WIRING DIAGRAM

